





For a Compact and durable design, Look no further!



# versatile

- Foams adjust to smooth and rough surfaces easily
- Level compensators allow the Mini-Gripper to adjust for uneven layer heights without changing the mount
- Ability to pick a variety of products without adjustment
- Unlike larger grippers, with fixed hole locations, arrayed Mini-Gripper(s) may be moved to obtain a variety of pitches
- Provides a new way to obtain faster cycle times!

# compact

- Easily adaptable to current tight clearance applications comparable to vacuum cups
- No need for over sizing for small applications. MGs do the trick!
- The vacuum source can be installed directly to or close to the Mini-Gripper to maximize its capability and efficiency (If using the manifold (VM) vacuum source, it must be installed close to the gripper/s)
- Much smaller sizes compared to FlexiGrip grippers

# easy to install

- Initial installation or changing a MG out for another is a snap!
- One 10mm compressed air fitting makes for quick push-lock connection to airline (airline 10mm O.D.)
- · Retrofit existing cups or existing pump system





## Labelling Information



### Round Foam MiniGrip



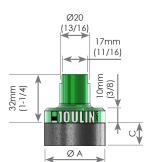

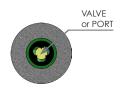





Technology:

- VG = Valve Gripper - PG = Port Gripper

Style (A): - GR25 [31/32]

- GR30 [1-3/16] - GR40 [1-9/16] - GR50 [1-31/32]

- GR60 [2-3/8] - GR70 [2-3/4]

Flow (PG or VG):

- REG = Regular - HG = High

Style / Dimensions	GR25	GR30	GR40	GR50	GR60	GR70			
<b>C</b> (Foam Thickness) - mm (in)	12 (15/32)	12 (15/32)	15 (19/32)	15 (19/32)	24 (15/16)	24 (15/16)			
Weight w/o fitting - g (oz)	23 (0.81)	29 (1.02)	44 (1.55)	63 (2.22)	86 (3.03)	115 (4.06)			
Holding Force N (lbs)* - 70% vacuum									

	Holding Force N (lbs)* - 70% vacuum								
Non porous like steel	4.7 (1)	7 (1.5)	11.1 (2.4)	17 (3.8)	21 (4.7)	38 (8.5)			
Semi-porous like wood	3.8 (0.8)				18 (4)	31 (6.9)			
Porous like cardboard	3.5 (0.7)	5.2 (1.1)	8.3 (1.8)	11 (2.4)	13 (2.9)	17 (3.8)			
Vacuum consumption Nl/s	0.06	0.07	0.09	0.12	0.14	0.17			

<sup>\*</sup> Fully covered, safety factor 2 already applied


PG: metered port openings VG: one valve in the only


opening


Example:

**MG-VG-GR60-HG** = Valve Gripper 60mm O.D. footprint; High flow

### Rectangular Foam MiniGrip

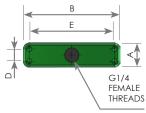

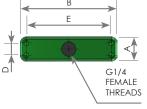

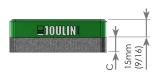



covered or large parts



Range of the gripper



Technology:

- PGR = Port Gripper Round
- PGO= Port Gripper Oblong

Dimensions (AxB):

- 20x80 [25/32 x 3-5/32]
- 20x120 [25/32 x 4-23/3])
- 40x60 [1-9/16 x 3-15/16]
- 40x100 [1-9/16 x 3-15/16]

Flow (PG):

- REG = Regular

- HG = High

Overall Dimensions	20x80	20x120	40x60	40x100					
Dimension <b>C</b> - mm (in)	12 (15/32)	12 (15/32)	15 (19/32)	15 (19/32)					
Dimension <b>D</b> - mm (in)	10 (3/8)	10 (3/8)	30 (1-3/16)	30 (1-3/16)					
Dimension <b>E</b> - mm (in)	70 (2-3/4)	110 (4-11/32)	50 (2)	90 (3-17/32)					
Weight w/o fitting - g (oz)	49 (1.73)	75 (2.65)	71 (2.5)	118 (4.16)					
	Holding Force N (lbs)* - 70% vacuum								
Non porous like steel	16 (3.5)	25 (5.6)	31 (6.9)	59 (13.2)					
Semi-porous like wood	14 (3.1)	22 (4.9)	27 (6.0)	52 (11.6)					
Porous like cardboard	12 (2.6)	19 (4.2)	23 (5.1)	41 (9.2)					

<sup>\*</sup> Fully covered, safety factor 2 already applied

PG: metered port openings

#### Example:


**MG-PGO-20X80-REG** = Port Gripper 20mm x 80mm footprint; Oblong holes in the foam; Regular flow

<sup>\*</sup> Forces and flow data given as a design help; these may vary a lot depending on the surface.

<sup>\*</sup> Forces and flow data given as a design help; these may vary a lot depending on the surface.



#### Venturi Direct Mount

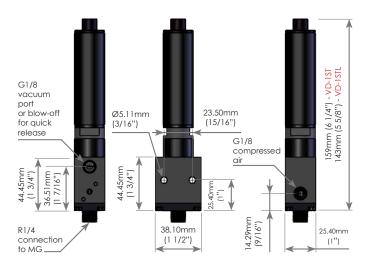

MG Option: Venturi Direct Mount

Integrated
Vacuum Source:

- 1ST = One Stage Regular Flow
- 1STL = One Stage Low Flow




Ø6mm

(0.24") Tube Inlet

This vacuum generation is an easy and quick installation option that gives higher flow for the larger MG grippers!

Use the 1STL for non-porous application to reduce compressed air consumption.

#### Venturi Inline

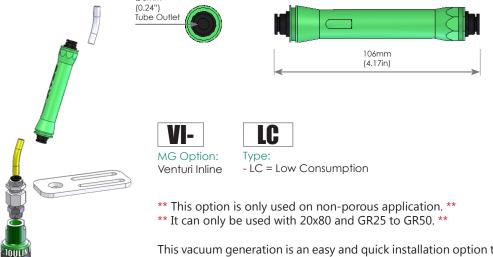

This vacuum generation is an easy and quick installation option that gives high performance at low feed pressure!

## Venturi Manifold




1ST

#### Integrated Vacuum Source:

- 1ST = One Stage Regular Flow
- 1STH= One Stage High Flow
- 2ST = 2 Stages
- 3ST = 3 Stages

This vacuum generation option is a quick and easy installation option that gives high flow and multiple gripper installation capabilities!

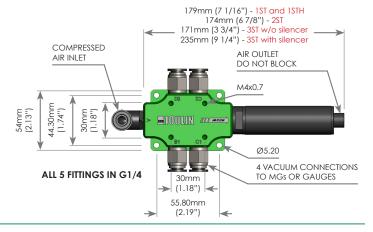






## Comparison of the different Vacuum Generators

#### Notes:

- 1. Provided as shown with all straight 10mm fittings. All tube inlets provided will be capped.
- 2. For better performance the vacuum source should be installed as close as possible to the gripper.

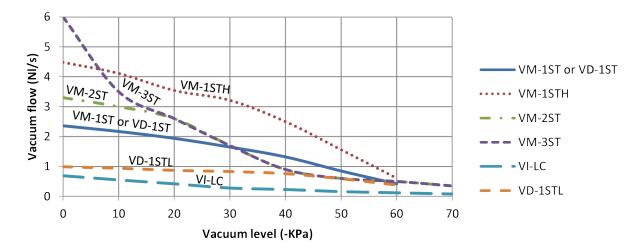

Туре	Max Feed		Air consumption	Vacuum flow NI/s at different vacuum levels -kPa							
	kPa pressui kPa mPa	pressure mPa	NI/s	0	10	20	30	40	50	60	70
VM-1ST or VD-1ST	65	0.6	1.79	2.36	2.17	1.94	1.65	1.32	0.85	0.42	-
VM-1STH				4.48		3.54	3.21				-
VM-2ST	75	0.6	1.75	3.3	3	2.6	1.7	0.9	0.6	0.5	0.35
VM-3ST											
VD-1STL	65	0.6	0.85	0.99	0.94	0.87	0.83	0.76	0.59	0.38	-
VI-LC			0.44	0.69		0.42			0.16		0.08

## Recommended maximum MGs per Vacuum Generator


	MiniGrip Sizes and Recommended Vacuum Flow (NI/s)										
Cartridges	20x80	20x120	40x60	40x100	GR25	GR30	GR40	GR50	GR60	GR70	
	0.10	0.15	0.21	0.38	0.06	0.07	0.09	0.12	0.14	0.17	
VM-1ST	4	2	2	1	7	5	4	3	2	2	
VM-1STH				1	10					3	
VM-2ST	5	3	2	1	8	7	5	4	3	3	
VM-3ST				1	8					3	
VD-1ST	1	1	1	1	1	1	1	1	1	1	
VD-1STL				1	1					1	
VI-LC	1	0	0	0	1	1	1	1	0	0	



## Valve Mini-Gripper vs. Port Mini-Gripper

The Valve Mini-Gripper (MG-VG) operates with a single check valve which automatically closes if no product is fully present and where a larger gripper is unnecessary. Example: arraying MG-VGs for the purpose of picking light weight narrow parts that are to be picked and placed horizontally (< 60° angle).

The Port Mini-Gripper (MG-PG) operates with a single open port. The gripper will still pick light weight products if at least 80% of the gripper covers it. Again, these are handy where a larger gripper is not necessary. An application example may be picking single can drinks that are to be picked and placed horizontally or vertically. MG-PG grippers can be flipped 360° with products attached. Of course, these MGs can be arrayed with other MG Grippers as well.

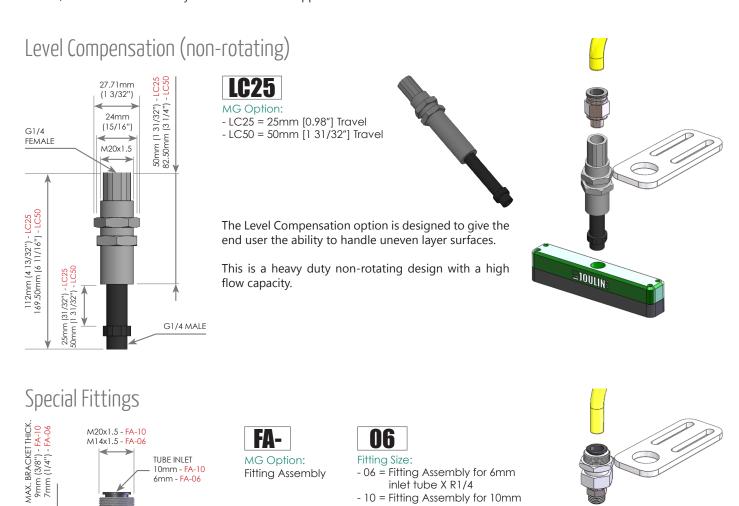


- 10 = Fitting Assembly for 10mm inlet tube X 1/4

This fitting assembly makes it easy to mount any Mini Gripper a bracket up to 9mm [3/8"] thick!

R 1/4 MALE



# Integration's Examples

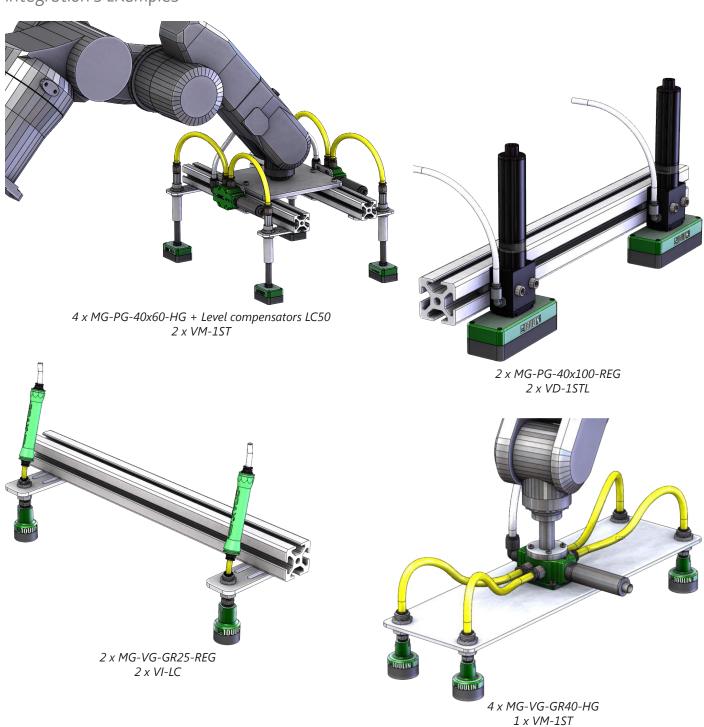




## Examples of Products to Handle



Plastic parts

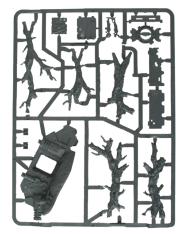

Plastic molded parts



Grill plates



Rough and irregular lumber



Checker plates



Slab cement



Cap of galss jars



Cans with cap



Rubber mat







2551 Hwy 70 SW HICKORY - NC 28602 Phone: +(001)828 327 2290

Fax: +(001)828 327 8678



http://www.joulin.com

17 avenue des Grenots F-91150 ETAMPES

Phone: +33 (0)1 69 92 16 16 Fax: +33 (0)1 64 94 21 35

E-mail: grippers@joulin.com

#### Have a problem handling your products?

Team Joulin has 50 years of Research and Development resulting in better solutions, more options, and vacuum systems offering greater flexibility than ever before.